





 



 



 


 

Selector push-buttons (black coloured)

	Function (1)	Cat. no.	Ref. no.	Cat. no.	Ref. no.	Cat. no.	Ref. no.
				Metal	Plastic	Plastic	
							
2 positions							
	Fixed 	201	P9MPS21G	184690			
		231	P9MPS22G	184691			
		235	P9MPS23G	184692			
3 positions							
	Fixed 	301	P9MPS34G	184693			
		323	P9MPS35G	184694			

Toggle switches (black coloured)

2 positions								
	Fixed position 	D	P9MCD	184695	P9XCD	185695	P9SCD	186695
3 positions								
	Fixed position 	B	P9MCB	184696				
		B	P9MCC	184697				
	Transient to zero from one position							

Joysticks (black coloured)

2 positions + central zero position ⁽¹⁾							
	Without interlock 	fixed positions	P9MMN2F	184700	P9XMN2F	185700	
		transient positions	P9MMN2T	184701	P9XMN2T	185701	
		1 transient - 3 fixed positions	P9MMN2A	184702			
		1 fixed - 3 transient positions	P9MMN2B	184703			
	With interlock	fixed positions	P9MMB2F	184710	P9XMB2F	185710	
		transient positions	P9MMB2T	184711	P9XMB2T	185711	
		1 transient - 3 fixed positions	P9MMB2A	184712	P9XMB2A	185712	
		1 fixed - 1 transient positions	P9MMB2B	184713	P9XMB2B	185713	
4 positions + central zero position ⁽¹⁾							
	Without interlock 	fixed positions	P9MMN4F	184720	P9XMN4F	185720	
		transient positions	P9MMN4T	184721	P9XMN4T	185721	
	With interlock	fixed positions	P9MMB4F	184740	P9XMB4F	185740	
		transient positions	P9MMB4T	184741	P9XMB4T	185741	

(1) Electrical diagrams, see E.22

The catalogue numbers in **bold** are available from stock.

Panel mounting

A

B

C

D

E

F

G

H

I

X

